



Motorola Moto X Back Cover Assembly Replacement

Prereq to remove the back case

Written By: Sam Lionheart





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [iOpener](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Cover Assembly



i In the following steps you will be releasing the clips holding the phone's cases together. However, the back case is also secured with an adhesive pad. After separating the clips you will use an iOpener to allow the case to fully open. **Do not** attempt to fully open the phone before loosening the adhesive.


- Insert a plastic opening tool into the seam between the front and rear covers near the SIM card slot.
- Slide the plastic opening tool along the seam toward the upper corner.

Step 2




- Carefully slide the plastic opening tool around the corner, freeing it from clips.

Step 3

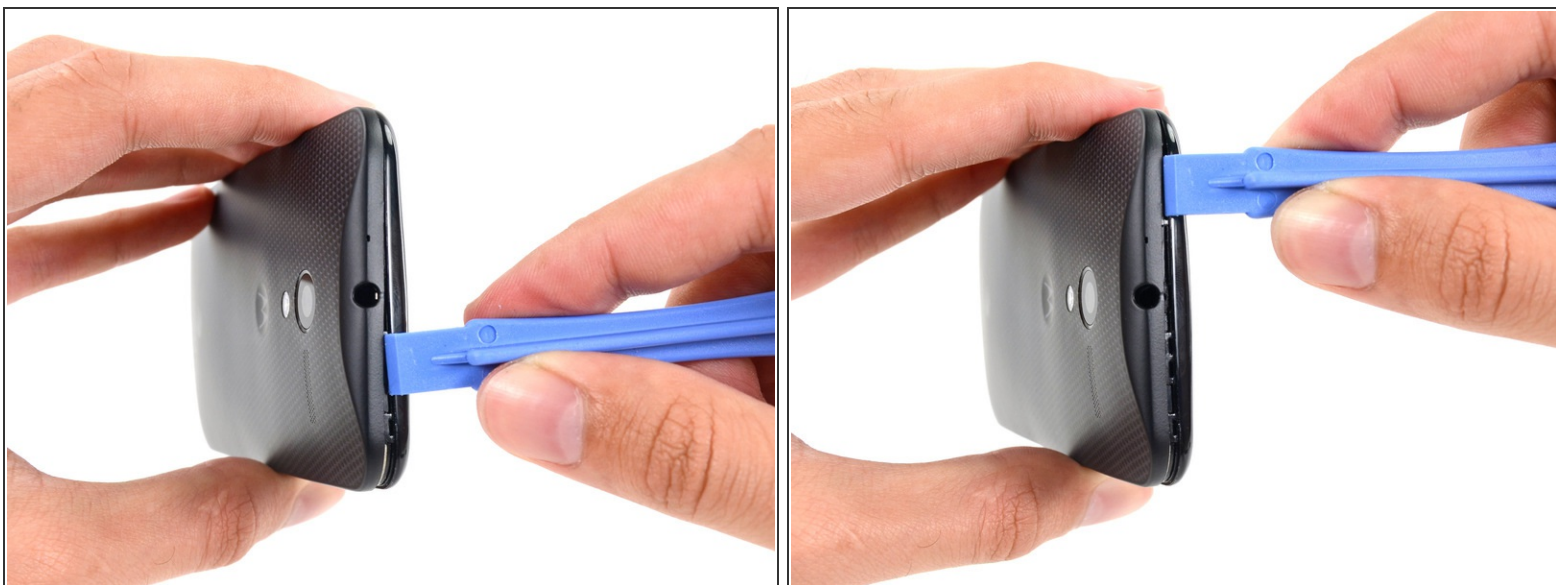

- Run the plastic opening tool along the seam nearest the headphone jack on the top of the phone.

Step 4

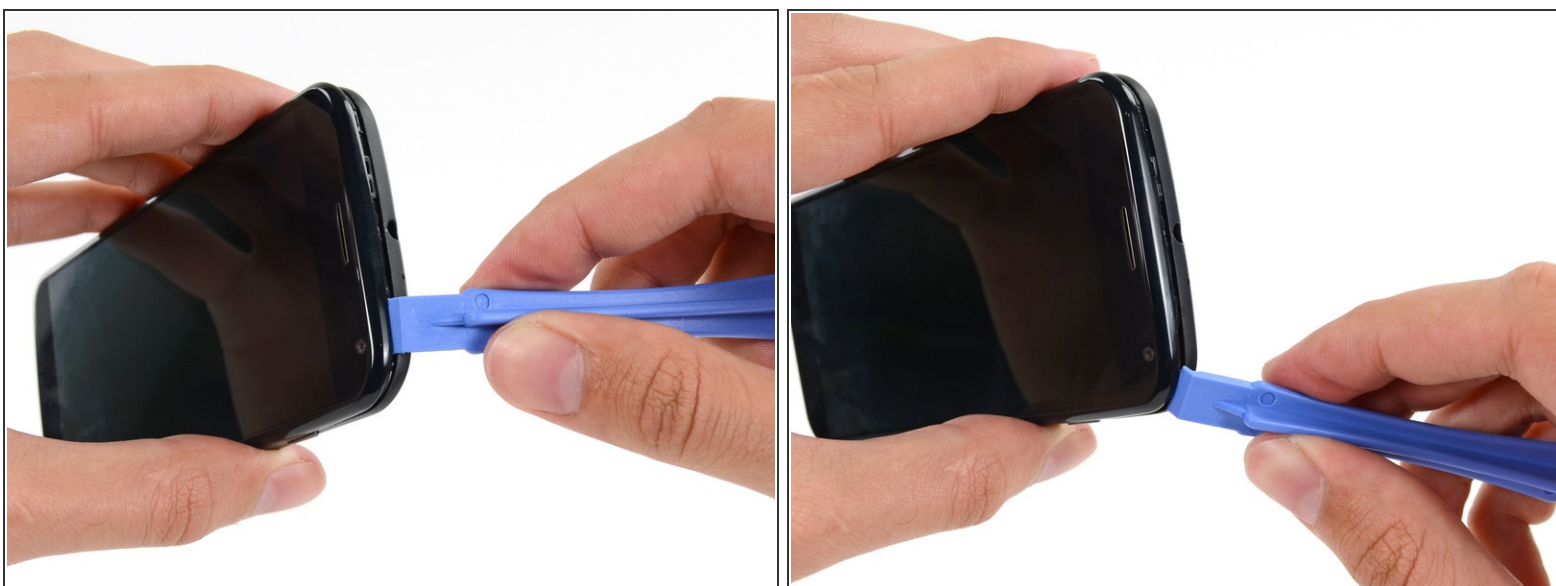


- Pry around the top right corner of the phone between the two covers.

Step 5



- Carefully slide the opening tool along the button side of the phone.

 The plastic on the front cover is thinner here and the buttons may move around; go slowly to avoid damaging the buttons or the front cover.

Step 6



- Insert a plastic opening tool into the seam just below the volume rocker to widen the gap.

Step 7



- Continue prying to the lower corner of the phone.

Step 8



- Carefully pry from the corner to the edge of the USB port.

Step 9



- Insert the plastic opening tool at the other end of the USB port and slide around the corner.

Step 10





- Continue separating clips around the corner and along the length of the phone.

i Once you are certain the clips have all been separated, use the following two steps to prepare your iOpener.

Step 11



-  We recommend that you clean your microwave before proceeding, as any nasty gunk on the bottom may end up stuck to the iOpener.
- Place the iOpener in the center of the microwave.
-  For carousel microwaves: Make sure the plate spins freely. If your iOpener gets stuck, it may overheat and burn.

Step 12



- Heat the iOpener for thirty seconds.
- Throughout the repair procedure, as the iOpener cools, reheat it in the microwave for an additional thirty seconds at a time.

- ⚠ Be careful not to overheat the iOpener during the repair. Overheating may cause the iOpener to burst.
- ⚠ Never touch the iOpener if it appears swollen.
- ⚠ Always wait at least three minutes before reheating the iOpener.

Step 13



- Remove the iOpener from the microwave, holding it by one of the two flat ends to avoid the hot center.
- ⚠ The iOpener will be very hot, so be careful when handling it. Use an oven mitt if necessary.

Step 14



- Lay the iOpener over the phone to loosen the adhesive securing the back cover. Let the bag sit on the device for approximately 90 seconds before attempting to remove the cover.

Step 15



- Starting from the SIM slot side, carefully peel the back cover off of the phone.
- ⓘ The back cover is very flexible, but you don't want to damage any internal components by being too hasty.
- ⚠ **Do not** separate the back cover entirely; it is still connected to the phone by the camera flash cable.
- ⓘ The flash cable is attached on the power/volume button side of the phone.

Step 16



- Gently set the back cover down in a way that exposes the camera flash cable connector, but does not put strain on it.

Step 17



- Use the tip of a spudger to flip up the retaining flap on the flash cable ZIF connector.

⚠ Be sure to pry only on the flap itself, **not** on the connector.

- Pull the flash cable straight out of its socket.

Step 18



- Separate the back cover from the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 08:53:35 PM.